<u>Instructions for installation of oil thermostat</u> for all Rotax engines of 912/914 series


Using the thermostat cat. no. 000 923 is recommended by the producer BRP Rotax in case of permanent operational low oil temperature.

The thermostat is possible to use for all Rotax 912 and 914 engine series.

Installation of the thermostat must be always discussed with aircraft producer.

Temperature when the thermostat starts opening is 85 $^{\circ}$ C with a tolerance of +/- 5 $^{\circ}$ C.

Thermostat installation scheme:

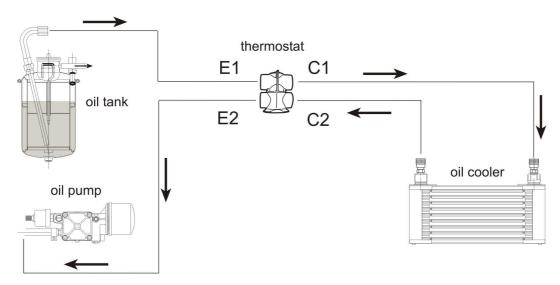

Assembly set contents:

1 pc.	000 923	thermostat
4 pcs.	000 925	nipple
4 pcs.	000 620	hose collar

Set weight: 0,40 kg